

Accutron Ultra Digital IHS MACHINE CHECKLIST

AIMS: Suitable for use on: Accutron Ultra, 4 cylinder stands

- To ensure **power supply** is connected
- To ensure that **gas supplies are sufficient**
- To check automatic safe cut off of nitrous oxide flow
- To ensure there are no leaks in the reservoir bag

Summary Checks to be performed prior to equipment use

Power Supply

- 1) Ensure power lead is firmly connected into the back of the digital unit and plugged in and turn on in the wall socket

Failsafe Oxygen

- 1) With **both** oxygen and nitrous oxide medical gas supply connected. Set machine at **50% mixture** with **6 L.P.M. flow**. Turn off oxygen supply - either at the oxygen E size cylinder on the 4 cylinder stand or disconnect the oxygen probe from the gas specific wall terminal.
- 2) Wait for oxygen to drain from the system. Nitrous oxide flow should cease and the **oxygen failure alarm should sound**.

Failsafe Nitrous

- 1) **Turn oxygen supply back on** - either by opening the O2 cylinder or re-connecting the oxygen hose to the gas specific wall terminal.
- 2) **Turn off nitrous oxide supply** by turning off the cylinder or disconnecting the nitrous oxide probe from the gas specific wall outlet. Nitrous oxide should cease to flow and the nitrous oxide alarm will sound and **FAILURE NITROUS LEDS will light**. Flow switches to 100% oxygen.
- 3) When the nitrous oxide is reintroduced to the system you will have to manually adjust the nitrous flow back to required flow rate.

Oxygen Flush

- 1) With both oxygen & nitrous oxide supplies on, **press the oxygen flush button**.
- 2) 'A minimum flow of **20 lpm** will be activated and the **flush LED will light up**

Inspiratory Valve & Bag Check

- 1) **Occlude common gas outlet** (using the palm of gloved hand)
- 2) **Press oxygen flush** to inflate reservoir bag
- 3) Check that the bag holds pressure and no gas escapes from the inspiratory valve.

Machine ready for use

Turn over the page for mobile 4 cylinders stand checks - if applicable

Digital Head Mobile 4 Cylinder Stand Checklist

NOTE: 4 cylinder stands should be fit with four gas cylinders at all times - 2 of each oxygen and nitrous oxide. These should be identified as **FULL** and **IN-USE**. Only ever turn on one O2 or N2o cylinder at a time. This is to prevent cross draining.

High-Pressure Leak Test

- 1) **Turn off** the Digital flowmeter power at the source
- 2) Turn on both **IN-USE** Cylinders, check contents is ok
- 3) **Turn off IN-USE** cylinders
- 4) Turn on "**FULL**" oxygen and "**FULL**" nitrous oxide E size cylinder
- 5) Observe readings on stand yoke pressure gauges
- 6) **Turn off** both "**FULL**" oxygen and nitrous oxide cylinders **WAIT 30 seconds**
- 7) Needles on both gauges should remain constant without any immediate fall in pressure
- 8) Turn on **BOTH IN-USE** cylinders

Machine ready for use

Note: Ensure that a **bodox seal** is fitted to each gas cylinder point. It is advisable to retain a small stock of replacement seals (4) as these can be lost when the cylinders are changed. The nitrous oxide pressure gauge is not an indication of cylinder contents.

Recommended two side print

Issue 5.1v 21-02-2024 R A Medical Services LTD T: **01535 652 444** - info@ramedical.com

